 


 
soundcore

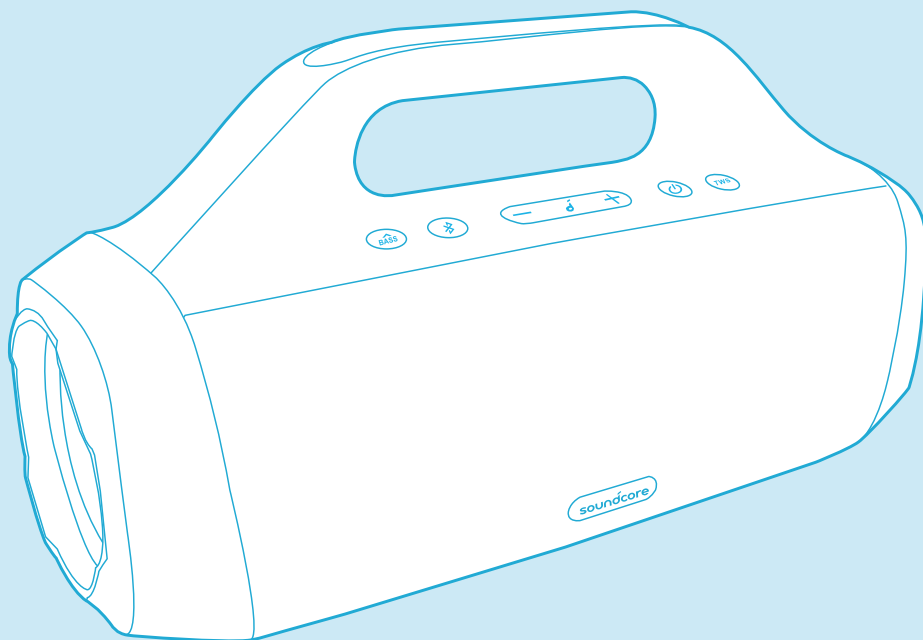

Soundcore Motion Boom
USER MANUAL

English	01	Portugues do Brasil	67
Čeština	07	Русский	73
Dansk	13	Slovenský Jazyk	79
Deutsch	19	Türkçe	85
Español	25	日本語	91
Suomi	31	한국어	97
Français	37	简体中文	103
Italiano	43	繁體中文	109
Nederlands	49	لَعَرَبِيَّة	115
Norsk	55	ברית	121
Język polski	61		

At a Glance

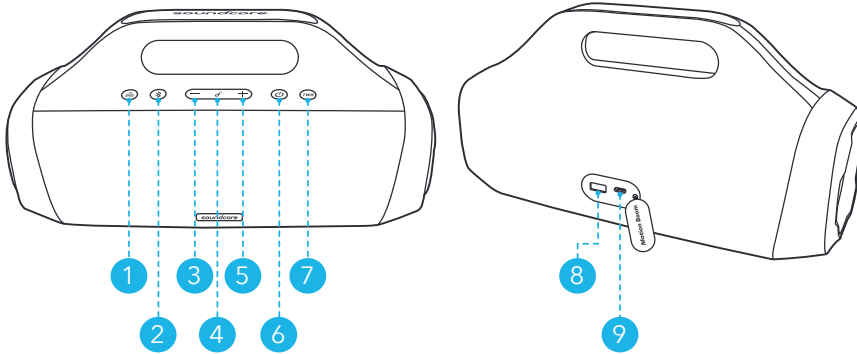

 
- ① Bass button
- ② Bluetooth button
- ③ Volume down button
- ④ Multi-function button
- ⑤ Volume up button
- ⑥ Power button
- ⑦ TWS button
- ⑧ USB-A port for charging out
- ⑨ USB-C port for charging in




Charging

Charge your Speaker

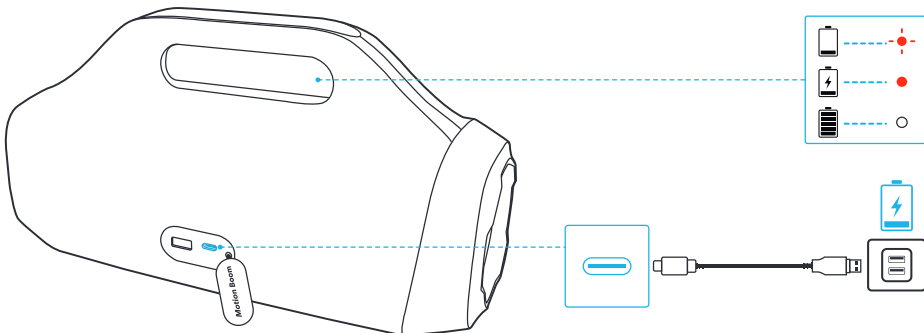

 
- Use a certified USB-C cable and charger to prevent any damage.
- Fully charge this speaker before the first use to prolong the lifespan of the built-in battery.
- Disconnect this speaker from the charger when fully charged. Do not charge for extended periods.



 
	Flashing red	Low battery
	Steady red	Being charged
	Steady white	Fully charged




Charge your USB Devices

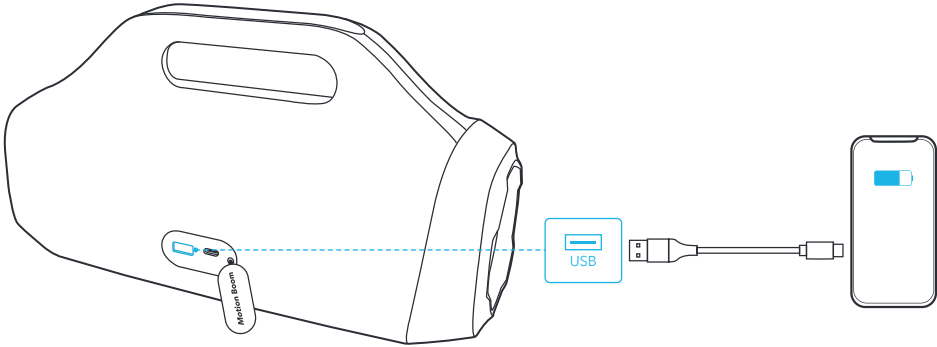Charge your USB devices through the USB-A charging port.

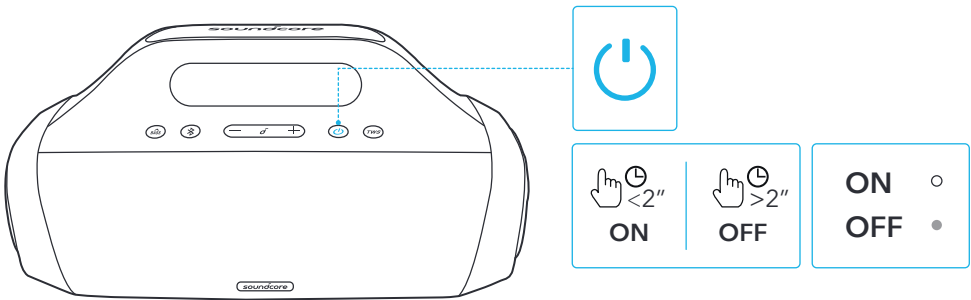

Powering On/Off



	Press and hold for 2 seconds		Steady white	Power on
	Press and hold for 2 seconds		Light off	Power off

 


- This speaker will power off automatically after 30 minutes if no device is connected.

Using Your Speaker

Bluetooth Mode

With this speaker, you can enjoy music through your Bluetooth-enabled devices.

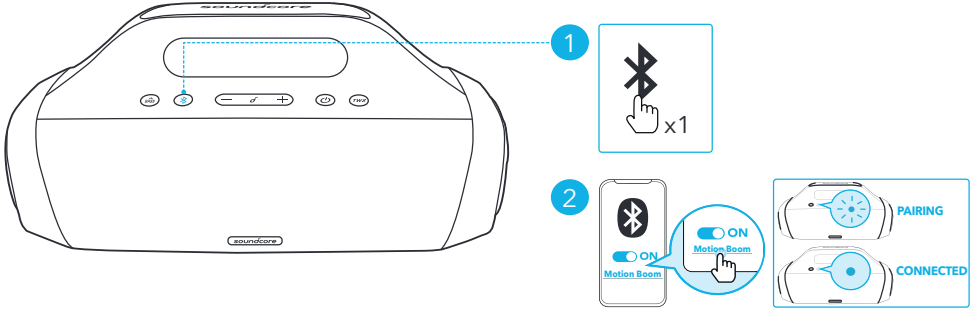

	Press	Enter Bluetooth pairing mode
	Flashing blue	Bluetooth pairing
	Steady blue	Bluetooth connected



 
- Each time you power on your Soundcore speaker, it will automatically connect to your last connected device if available within the Bluetooth range. If not, press the Bluetooth button to enter Bluetooth pairing mode.

TWS (True Wireless Stereo) Mode

Two identical Soundcore speakers can pair up with each other for true wireless stereo sound. In TWS mode, connect either one of the two speakers with your mobile device so that both speakers play the same audio (one as L channel and the other as R channel).

On both Soundcore speakers, press the TWS button to enter TWS pairing mode.

- The speakers start searching for each other to establish the TWS connection. The TWS LED indicator on both speakers will flash white.
- Once successfully connected, the TWS LED indicator on both speakers will become steady white.

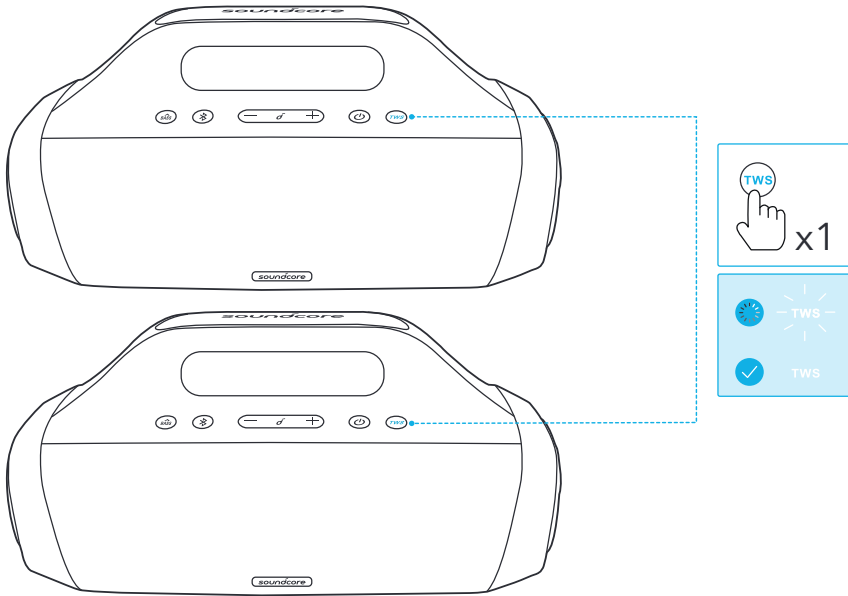







TWS	Press	Enter TWS pairing mode
	Flashing white	TWS pairing
	Steady white	TWS connected



- To exit the TWS mode, press and hold the TWS button for 2 seconds.

Button Controls

		
	Press	Play/Pause
	Press twice	Next track
	Press three times	Previous track
	Press or press and hold	Adjust volume
	Press	Turn BassUp on/off



Press

Answer/End a call



Press

Answer a second incoming call and put the current call on hold



Press and hold for 2 seconds

Reject an incoming call



Press and hold for 2 seconds

Switch between a call on hold and an active call



Press and hold for 2 seconds

Activate Siri or other voice assistant software

Soundcore App

Download the Soundcore app to enhance your experience.

Product information: Check the product name and software version, or read the user manual.

Firmware update: You will be informed once a new version of firmware is detected when you connect the speaker with the app.

Battery status: Indicates the remaining battery level of your speaker.

 
Volume control: Adjust the volume level via the app without pressing the buttons on the speaker.

EQ settings: There are 4 EQ settings you can choose from in the app to optimize your experience while enjoying different music genres.

- **Soundcore Signature:** Normal EQ mode with well-balanced sound.
- **Voice:** Voices stand out more clearly from other ambient sounds.
- **Treble Boost:** High frequencies are enhanced.
- **Balance:** No enhancement for high-frequency and low-frequency sounds.

Set Auto-power off time: Set an auto-power off time (5/10/30/60 minutes, 30 minutes by default), the speaker will automatically power off when time is up.

Voice prompt: Mute or restore the voice prompt while powering on/off.

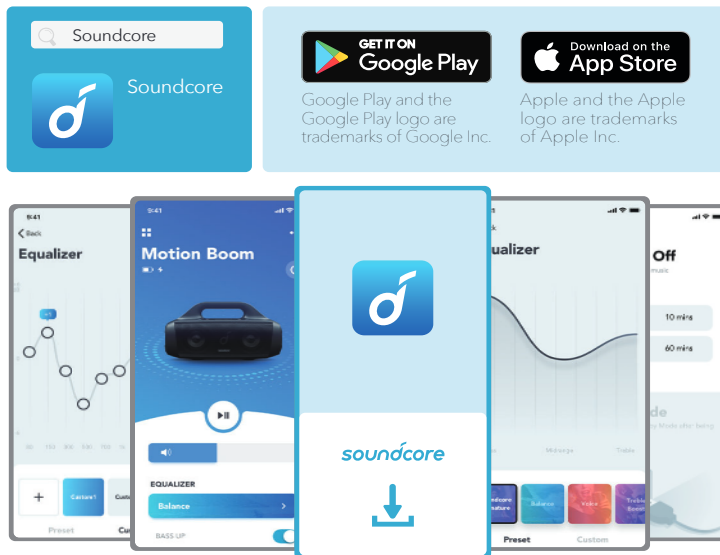

Specifications

Specifications are subject to change without notice.

DC power input	5 V $\overline{\text{DC}}$ 2.1 A
Battery capacity	10000 mAh
USB output	5 V $\overline{\text{DC}}$ 1 A
Audio output power	30 W
Charging time	4 hours
Playtime (varies by volume level and music content)	Up to 24 hours
Waterproof level	IPX7
Bluetooth version	5.0
Bluetooth range	20 m / 66 ft